

CEDAR WASH™



Designed for Western Red Cedar & Redwood (Softwoods) and Walnut & Mahogany (Hardwoods)

A READY-TO-USE CLEANER SPECIFICALLY FORMULATED FOR PREPARING THE SURFACE OF WOOD SPECIES THAT CONTAIN HIGH LEVELS OF WOOD EXTRACTIVES AND RESIN OILS

CEDAR WASH is designed to remove surface resin oils, high concentrations of water-soluble wood extractives, dirt, grease, grime, pollen, and surface mold and mildew without harming the wood.

- Removes resin oils and wood extractives from the surface of the wood that may interfere with adhesion of *LIFELINE*™ exterior stains or *Prelude*™ to the wood surface.
- Removes dirt, dust, pollen and other foreign substances from log surfaces.
- Will not harm finishes that are in good condition.
- Contains an aggressive detergent package for efficient cleaning of the wood surface.
- Safe to use on chinking and sealants
- Low environmental impact



2.5 gallons (approx. 9.5 liters)

CAUTION - DO NOT TAKE INTERNALLY

Distributed By:

Schroeder Log Home Supply, Inc.

1-800-359-6614 www.loghelp.com

**PERMA-CHINK
SYSTEMS, INC.**

Made in USA

CEDAR WASH™ APPLICATION INSTRUCTIONS

Cedar Wash is most easily applied using a pump-up garden type sprayer although a mop and bucket works too. If you are going to use a pressure washer (not recommended) adding *Cedar Wash* directly to the pressure washer does not give the cleaner enough contact time with the wood to be very effective.

Plan on cleaning small areas at a time since *Cedar Wash* needs to stay wet in order to do its job. Apply the *Cedar Wash* solution starting at the bottom of the wall and work your way up. Work only an area big enough, so that the *Cedar Wash* is on the wall for about 10 to 15 minutes. Gently scrub the wall with a soft bristled brush to remove stubborn stains and heavily soiled areas. DO NOT ALLOW *CEDAR WASH* SOLUTION TO DRY ON THE SURFACE OF THE WOOD. Lightly mist with water if *Cedar Wash* is drying too fast and adjust working area. Rinse *Cedar Wash* solution using a garden hose or low pressure washer thoroughly from the top down. **Remember:** Apply *Cedar Wash* from the bottom up, rinse from the top down. This will help prevent streaks and drip marks.

Coverage

Five gallons of *Cedar Wash* Ready-to-Use cleaning solution will clean approximately 1000 square feet of wood surface area. Each gallon of *Cedar Wash* as applied will clean approximately 175 to 225 square feet of wood surface depending on the wood porosity.

Clean-up

Use just water to clean-up any spilled *Cedar Wash*.

First Aid

Wear safety glasses or goggles and rubber gloves during use. Wash hands and any exposed skin with soap and water after job is completed. Remove saturated clothing and laundry in cool or warm water.

Precautionary

Although *Cedar Wash* should not harm plants or shrubs, it is best to rinse down any plants, grass, or bushes that may have been exposed to the *Cedar Wash* solution as soon as possible. Lightly wet adjacent walls with water to direct contact with bare wood and potential streaking or discoloration. If overspray does occur, quickly rinse with clean water to thoroughly remove cleaner overspray.

Storage

Store *Cedar Wash* out of direct sunlight and protect from freezing. Although *Cedar Wash* is freeze-thaw stable, if the product is accidentally frozen, allow to thaw and check for suitability of use before applying.

Packaging

Cedar Wash is available in 5 gallon or 2.5 gallon containers.

Shelf Life

One year from date of purchase.

Perma-Chink Systems, Inc. warrants and represents that Perma-Chink Systems Family of Products will conform to the description and specifications previously set forth and be free from defects in material and workmanship when shipped to the buyer. EXCEPT WHEN HEREIN EXPRESSLY STATED, THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, BY OPERATION OF LAW OR OTHERWISE, APPLICABLE TO THE PERMA-CHINK LOG HOME PRODUCT. PERMA-CHINK SYSTEMS EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.